


HEATER ORDERING INSTRUCTIONS

When ordering a heater, specify the part number from the catalog followed by the identification code(s) for the model designation(s) from the Heater Specifications Chart below.

For example: If you want to purchase a Lite2, LJ Model, 250,000 Btu, Natural Gas Heater with A.S.M.E. Certification and High Altitude Orifices, you would order part number **LJ250NXH**.

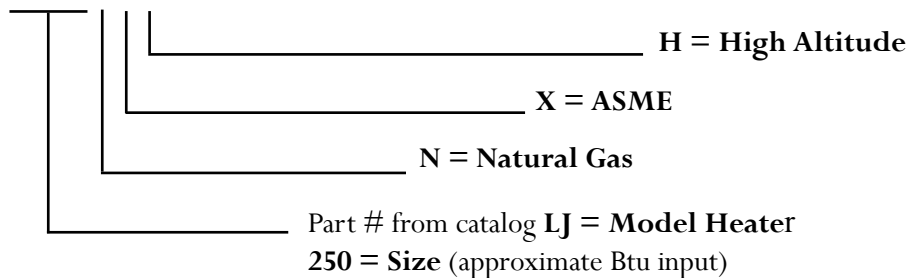

The identification codes are always entered in the following order: The fuel code is entered immediately after the catalog part number. The heat exchanger code is entered after the fuel code. The burner tray code is entered after the heat exchanger code. If you are not ordering a special heat exchanger but need to order a special burner tray enter a dash (-) after the fuel code and then enter the burner tray code.

HEATER SPECIFICATIONS CHART

	MODEL DESIGNATION	IDENTIFICATION CODE	
FUEL TYPE	Natural Gas	N	Enter fuel code "N" or "P" after the catalog part number.
	Propane Gas	P	
HEAT EXCHANGERS	Salt Water Construction (Include cupro-nickel tubes monel sensor, bronze headers (polymer on LX/LT) and stainless steel fittings)	S	Enter optional heat exchanger code "S", "X", "B" or "-" after fuel code. Enter a dash if a standard heat exchanger is requested but a special burner tray is being ordered.
	ASME	X*	
	Bronze Headers *Not available on LX or LT Heaters	B	
BURNER TRAYS	Low NOx Option	L*	Enter optional burner tray code "L", "H" or "J" after the heat exchanger code.
	High Altitude (Natural 3-6K, Propane 5-10K)	H	
	Extra High Altitude (Natural 6-10K) *Standard on LX and LT Heaters, Not available in Lite2 LJ or LG model heaters.	J	